

Nasotec Outer Ring Clamp manual

Specifications

- Type: Type A For universal turntables, Type B For turntables with non-fixed arm
- -Weight
 - .Type A: ring 1.09 kg, Mat 0.73 kg
- .Type B: ring 1.69 kg, Mat 2.35 kg
- Acrylic adapter mat thickness
- .Type A: 9 mm / Type B: 25 mm
- -Material: ring Stainless steel, Mat Acryl
- -Dimensions

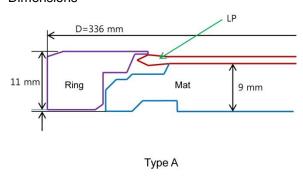

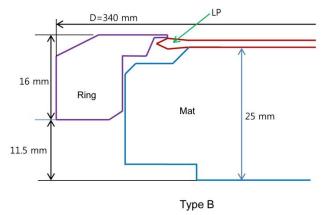


Features


- -Designed to be used as many turntables as possible.
- -Precisely machined and processed very smooth surface to safeguard a stylus

Do's and don'ts

- -Remove existing mat.
- -Be sure to use an arm lifter in any case.
- -Do not use defective arm lifter. A fast drop cartridge on the near edge of the ring may bump against it and causes damage to the stylus.
- -To reduce impact from fast drop of the cartridge and to let the stylus down on the right point of the track adjust the height between the stylus and the LP as low as possible. (recommendation: about 5 mm)
- -At the first track please let the stylus down from the edge of the ring as far away as possible.
- -Don't scratch on the mirror-like upper surface.
- -Pay attention not to hurt your fingers or hand from the sharp edge of the ring.

Attention!

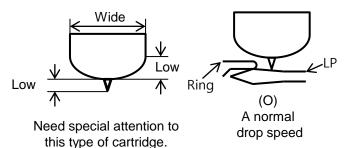




A fast drop speed In rare cases, the cartridge may jump up on the ring.



(Recommendation)
Down the stylus as far away as possible from the ring and drop the lifter slowly as possible.

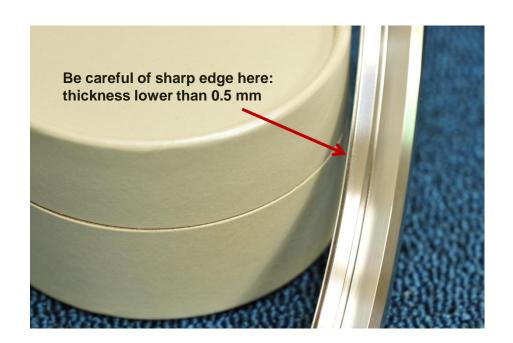

Nasotec Corporation 96, Hau 3-gil, Paju-si, Gyeonggi-do, 10909 Korea +82 (0)31-944-1730 nasotec@nasotec.com www.nasotec.com www.highendcity.com